



INTRODUCTION :

Important: Read these instructions carefully so as to familiarize yourself with the appliance before connecting it to its gas container. Keep these instructions for future reference.

⚠ ONLY USE IN WELL VENTILATED AREAS.

Important: Read those instructions for use carefully so as to familiarize yourself with the appliance before connecting it to its gas container.

1. Check that seal (between the appliance and the gas container) are in place and in good condition before connecting to the gas container.
2. Do not use the appliance if it has damaged or worn seals. Do not use the appliance which it is leaking, damaged or which does not operate properly.
3. The appliance must be used in a well ventilated location in accordance with national requirements.
4. The appliance must be operated on a horizontal surface. Always use away from flammable surfaces and materials including foliage, ensuring a clear 1 meter radius to the sides and above the appliance
5. The gas containers shall be changed in as well ventilated location, preferably outside, away from any sources of ignition, such as naked flames, pilots, electric fires and away from other people
6. Using the gloves when the appliance is hot.
7. Check that burners are extinguished before disconnecting the gas container.
8. Check the seals before connecting a new gas container to the appliance.
9. Change the gas container outside and away from people.
10. Do not modify the appliance.
11. Always make certain the torch is placed on a level surface when connected to the gas cylinder to reduce the risk of accidental tip over. Be sure torch is not pointed in a direction which could cause nearby objects to be burned when torch is set down.

The correct way of connecting the appliance to a gas container:

1. Turn control knob (3) to closed, (off or "-") position.
2. Check the oil seals before connecting a gas cartridge to the appliance.
3. Align cartridge notch with locator tab on the Multi-Purpose Torch and keeping the cartridge upright, push down gently and twist down.
4. Be sure to check that no gas is leaking. If there is a gas leak on the appliance (smell of gas), take it outside immediately into a well ventilated, flame free location where the leak may be detected and stopped. If you wish to check for leaks on your appliance, do it outside. Do not try detect leaks with a flame, use soapy water.

Lighting instruction:

1. You should make sure the valve (3) be closed.
2. Open the gas regulator (3) by approx. 1/4 tum in the anti-clockwise direction burner tube (1) is pointed away from persons and flammable materials, ignite the device immediately on the burner with the piezo ignition (2). Rotate the regulator knob (3) in the (+) ON or (-) OFF direction (in anti-clockwise or clockwise direction) to adjust the output of the device until a full flame is produced. If the device is cold or if the device is operated with a new gas cartridge an irregular, unstable flame can be produced or 'flaring' may occur. This is normal and does not indicate a fault. The flame will stabilize within 2-3 minutes after the appliance has warmed up. Do not point the appliance upwards or downwards during this warm-up period.

PLEASE DO NOT DISCARD THESE WARNINGS AND INSTRUCTIONS

FINISHING WORK - EXTINGUISHING THE FLAME

After using the device, first shut the valve.

1. Be sure to burn off any gas remaining in the torch and be sure that the flame is extinguished before you put the device down.
2. After the flame has gone out, allow the device to cool down completely as parts of the device can become very hot even if the device is only used for a short while.
3. The gas container must be detached if the burner is not to be used over longer periods, or if it is to be transported

Maintenance and Storage

CHANGING GAS CARTRIDGES

1. CAUTION: Change the pressurized gas cartridge only outdoors or in well-ventilated rooms!
2. Shut the valve by turning the regulator knob clockwise.
3. Be sure to burn off any gas remaining in the torch and be sure that the flame is extinguished before you put the device down.
4. Unscrew the spent pressurized gas cartridge from the appliance valve by turning it anti-clockwise.
5. Ensure that the valve is closed.
6. Ensure that the seal in the regulator valve is in place and is undamaged. Replace the valve if necessary.
7. Connect the pressurized gas cartridge to the device as described in the "Assembly" section.

SEAL

Ensure that the rubber seal is intact and in excellent condition.

1. GENERAL MAINTENANCE

2. The device does not require any maintenance.
3. The injector does not require any cleaning.
4. Do not make any changes to the device. -
If the appliance develops a fault, have it repaired at a competent workshop or contact the manufacturer.

STORAGE AND TRANSPORT

1. If the appliance is not to be used over longer periods, keep it at a safe, cool, dry and well-ventilated
2. place out of the reach of children.
3. Protect the pressurized gas cartridge from sunlight and never expose the gas cartridge to temperatures above 50°C.
4. Do not pierce or burn the pressurized gas cartridge even after use.
5. The pressurize gas cartridge is not refillable and must be disposed of properly after use.
6. The gas container must be detached if the burner is not to be used over longer periods, or if it is to be transported.

RECYCLING

Worn out tools must be recycled at a suitable recycling facility. Do not dispose of in the household waste. For further information, please contact the responsible authorities. Please dispose of the packaging material in accordance with the material type as well as the local regulations in force in your area.